


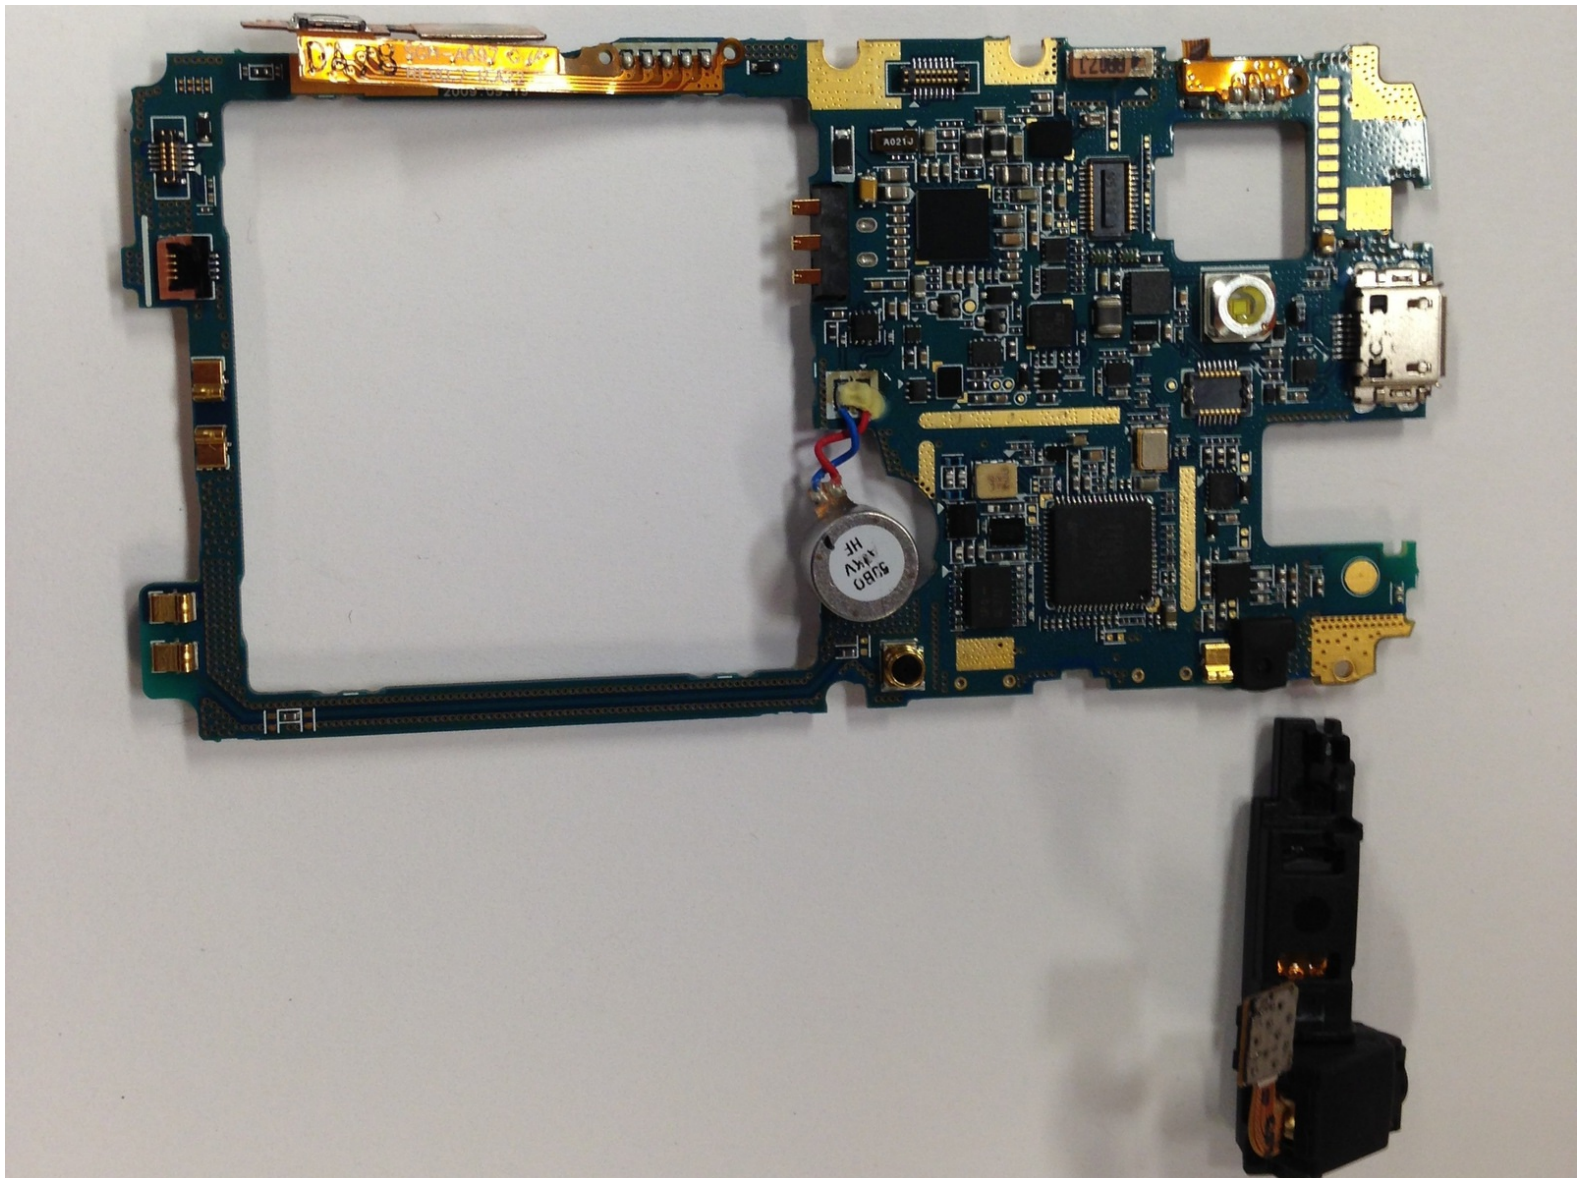

Samsung Mythic SGH-a897 Ear Speaker Replacement

Replace a faulty ear speaker in your Samsung Mythic SGH-a897.

Written By: Collin Gordon



INTRODUCTION

Use this guide to replace the ear speaker of the Samsung Mythic SGH-a897.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Battery



- Slide your fingernail into the slit at the bottom of the phone to remove the back cover.

Step 2



- Place your finger in either of the bottom corner of the battery slot and lift to remove the battery.

Step 3 — Rear Case



- Remove six 5 mm Phillips #0 screws from the back of the phone.

Step 4



- Insert a plastic opening tool into the seam between the back case and the rest of the phone.
- Working along the seam, pry the back from the phone.

Step 5 — Camera



- Use a plastic opening tool to disconnect the camera cable from the motherboard.
- Carefully remove the camera from the phone.

Step 6 — Motherboard



- Remove the two remaining 3.75 mm Phillips screws.

Step 7



- Firmly grip the black lever with tweezers
- Use the tweezers to flip the black lever up so that it is perpendicular to the motherboard.

Step 8



- Carefully use the tweezers to slide the black ZIF cable out of the socket.

Step 9




- Use the tweezers to unclip the black connector as shown.

Step 10




- Use the tweezers to unclip the orange flexible circuit board from the side of the phone.

Step 11

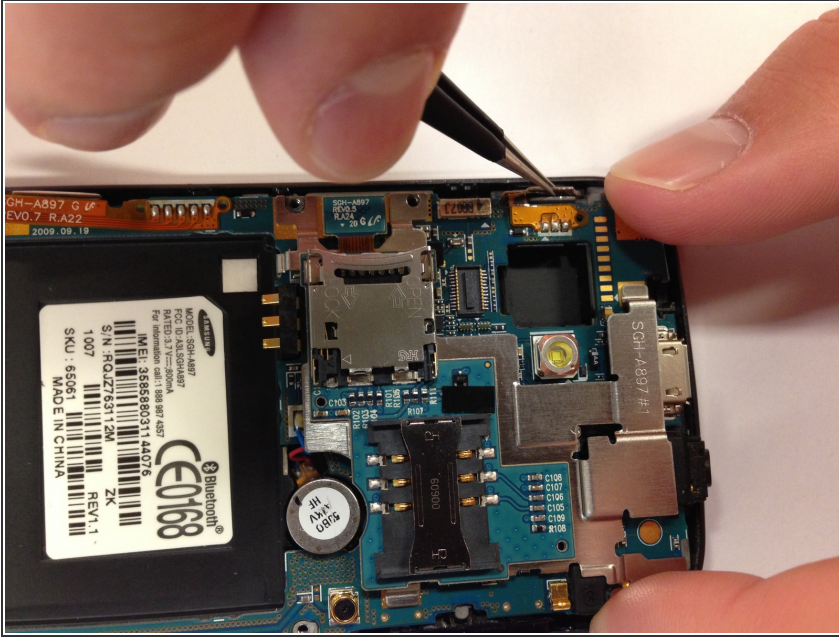

- Use the tweezers to unclip the other orange, smaller flexible circuit board.


 Work carefully. This is a very delicate part of the phone that can easily be broken.

Step 12



- Slide one side of the tweezers underneath the red and blue wires of the capacitor.
- Carefully apply pressure away from the phone to lift.

Step 13


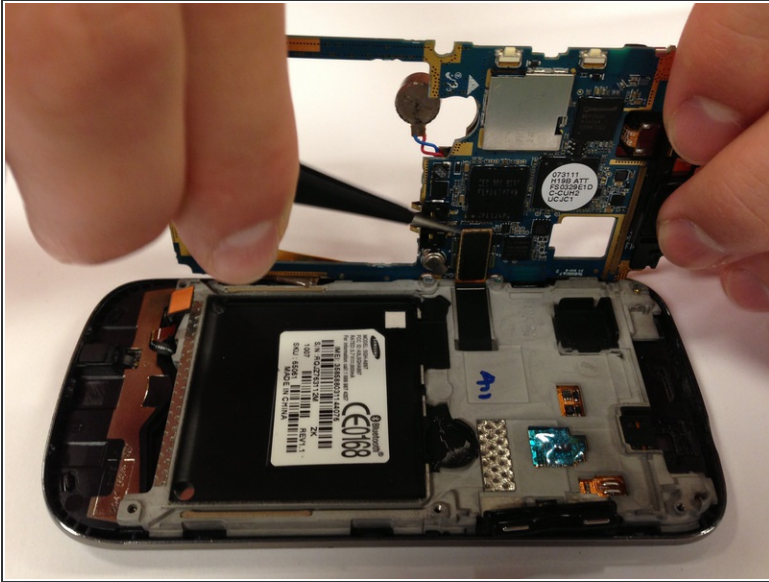


- Carefully tilt the motherboard up from the back of the phone.

⚠ Don't remove the motherboard completely. There is one more clip on the backside of the motherboard that needs to be removed.


- Use tweezers to unclip the black connector.

Step 14 — Daughterboard

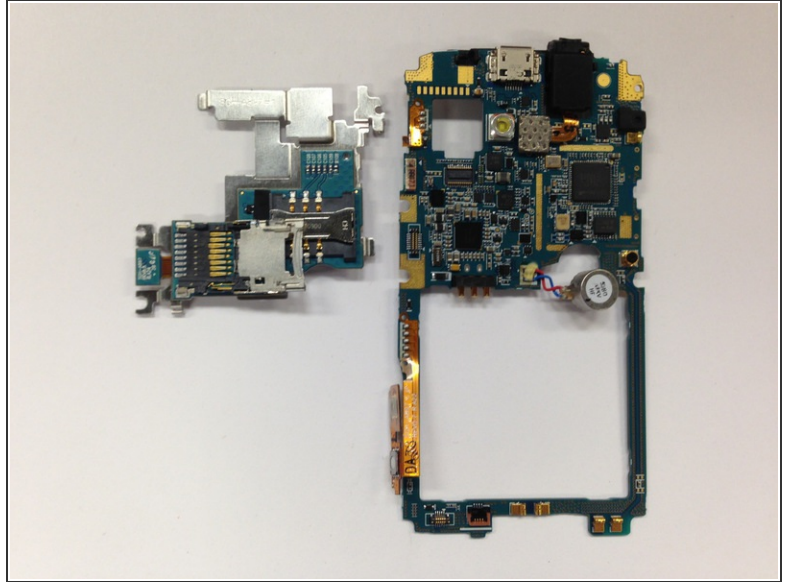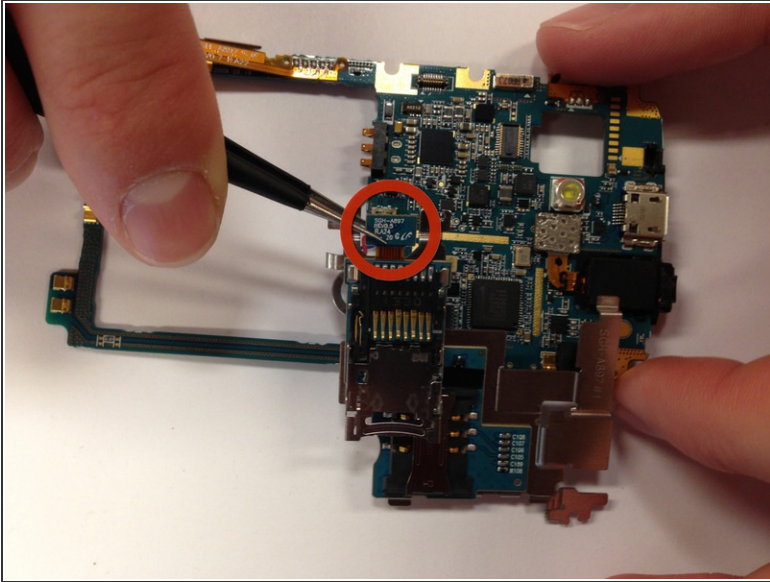

- use the tweezers to unclip the connector as shown.
- This is the only attachment that is holding the daughterboard to the motherboard. You can now remove the daughterboard.

Step 15 — Ear Speaker

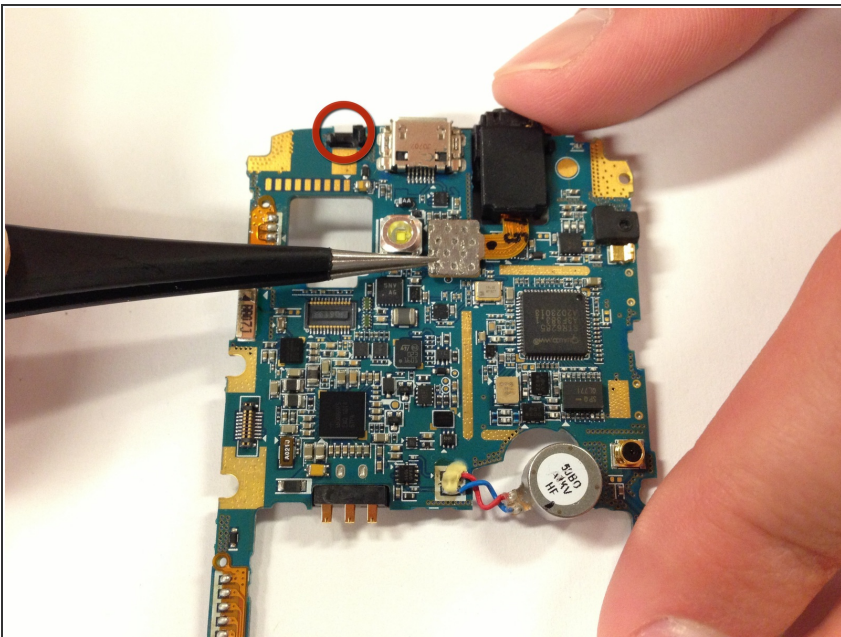

- Use tweezers to unclip the silver connector.
- Then put pressure on the black latch which is circled to release the speaker.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-09 09:10:13 AM.